




Congratulations on purchasing Fully Tested electronic Vacuum Tube Upgrades from AudioZomba. With care, they will give you years of trouble-free service and outstanding performance.

Instructions for Use

- Ensure your equipment is switched off, isolated at the mains and valves cooled to ambient temperature
- Gently pull the valves to be replaced upwards toggling back and forth gently if necessary, until the valves disengage from their sockets

Continued overleaf....

www.audiozomba.com info@audiozomba.com

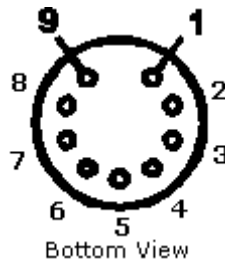

- Align and locate the pins of your new tubes in line with the gap in the valve seat as pictured in the example above
- Gently but firmly, push the valve down into the socket until it fully engages
 - Ensuring volume is set to zero, power up the amplifier and allow the valves a few moments to warm up and start glowing
- You can now enjoy your new tubes. NOS valves can make a few pops, coughs, splutters, hisses etc when new but should soon settle down
 - Allow up to 20 hours for the valves to burn in
- In the rare event of loud bang or failure isolate equipment and remove the valve carefully once cool and contact us.

